



Instrução de Montagem


LOJA **Rudnick**

www.lojarudnick.com.br


Acessórios

A	18201442		4,0 x 50	04
B	18201506		4,0 x 40	12
C	18200142		4,0 x 30	08
D	18201122		3,5 x 12	12
E	18401118		Mini Girofix	04
F	18401119		Tambor Mini Girofix	04
G	10500001		Ø6,0 x 30	08
H	18302765	 Cor Paina	Tapa Furo 18mm	08
I	18306292	 Cor Paina	Tapa Furo 13mm	04
M	18400926		Corrediça Metálica	02
N	18100006		Prego 10 x 10	24
O	18300569		RV8	02



Guarda-Roupa Lysa c/ 4 Gavetas

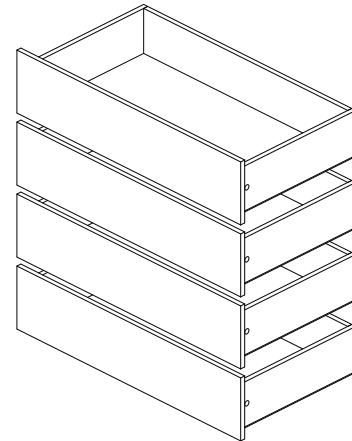

Utilizar a régua abaixo para medir os acessórios.



Segue opções de montagem, abaixo, para as gavetas adicionais.

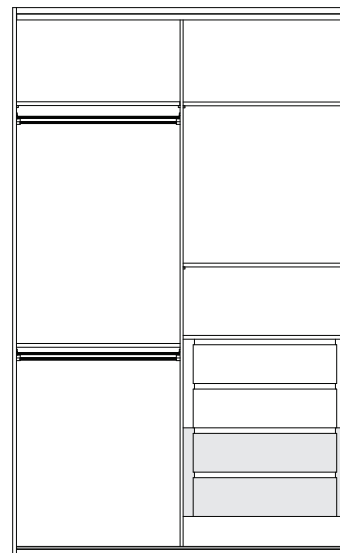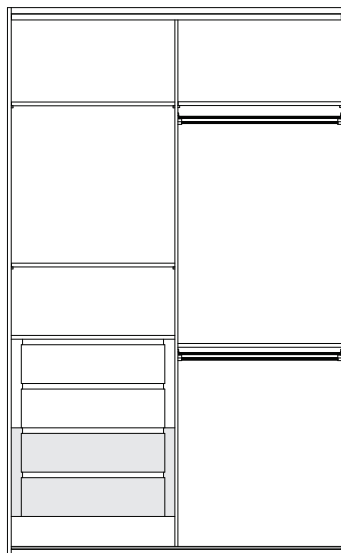


Atenção!


Para acessar o vídeo de montagem, você deve abrir a câmera do seu celular e apontá-la para o código QR ao lado.




Passo 01

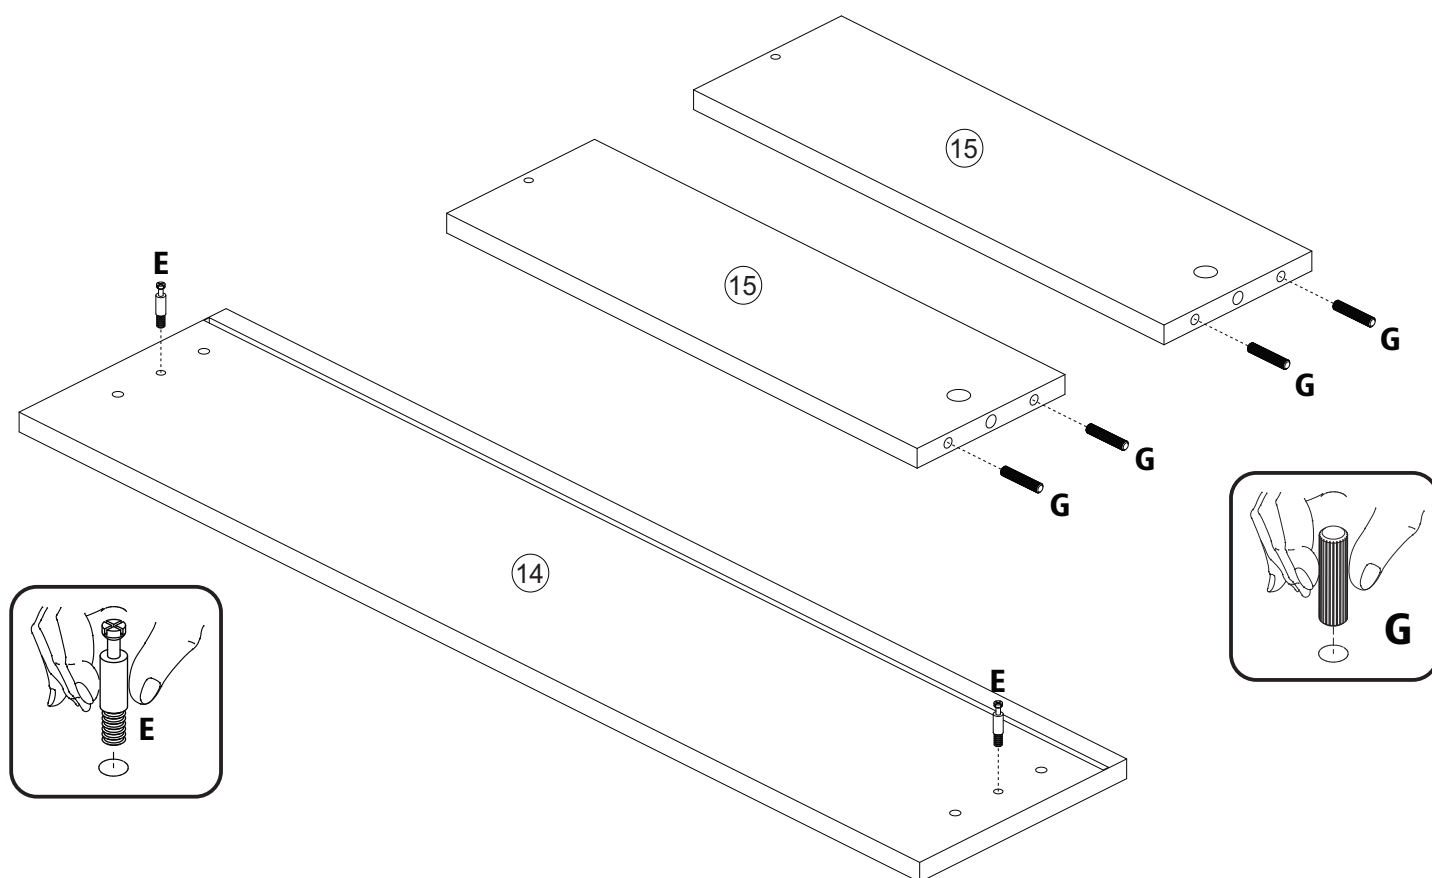


Passo 02

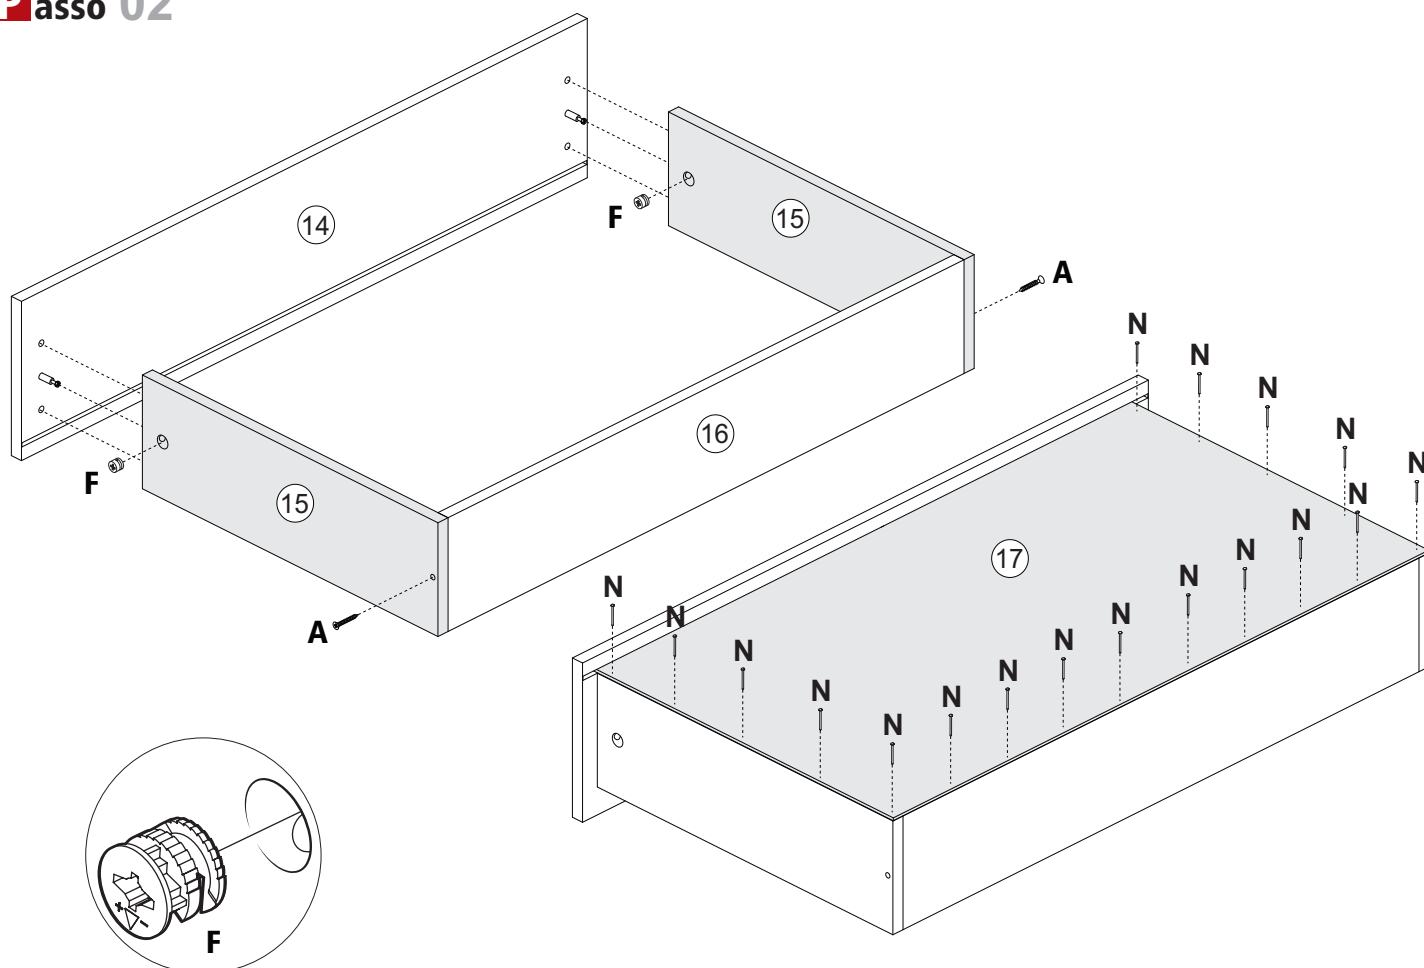

Passo 03


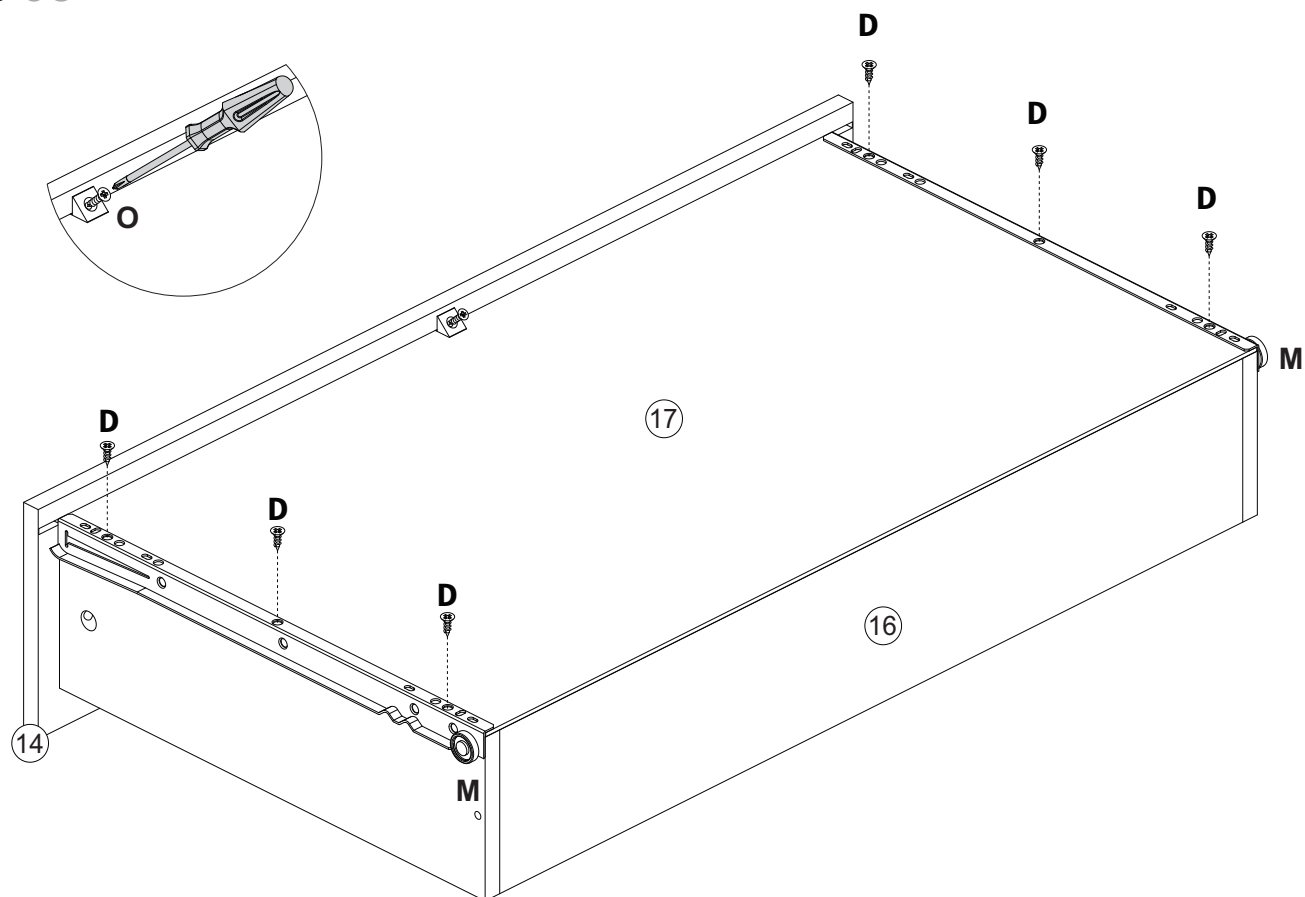


Passo 04

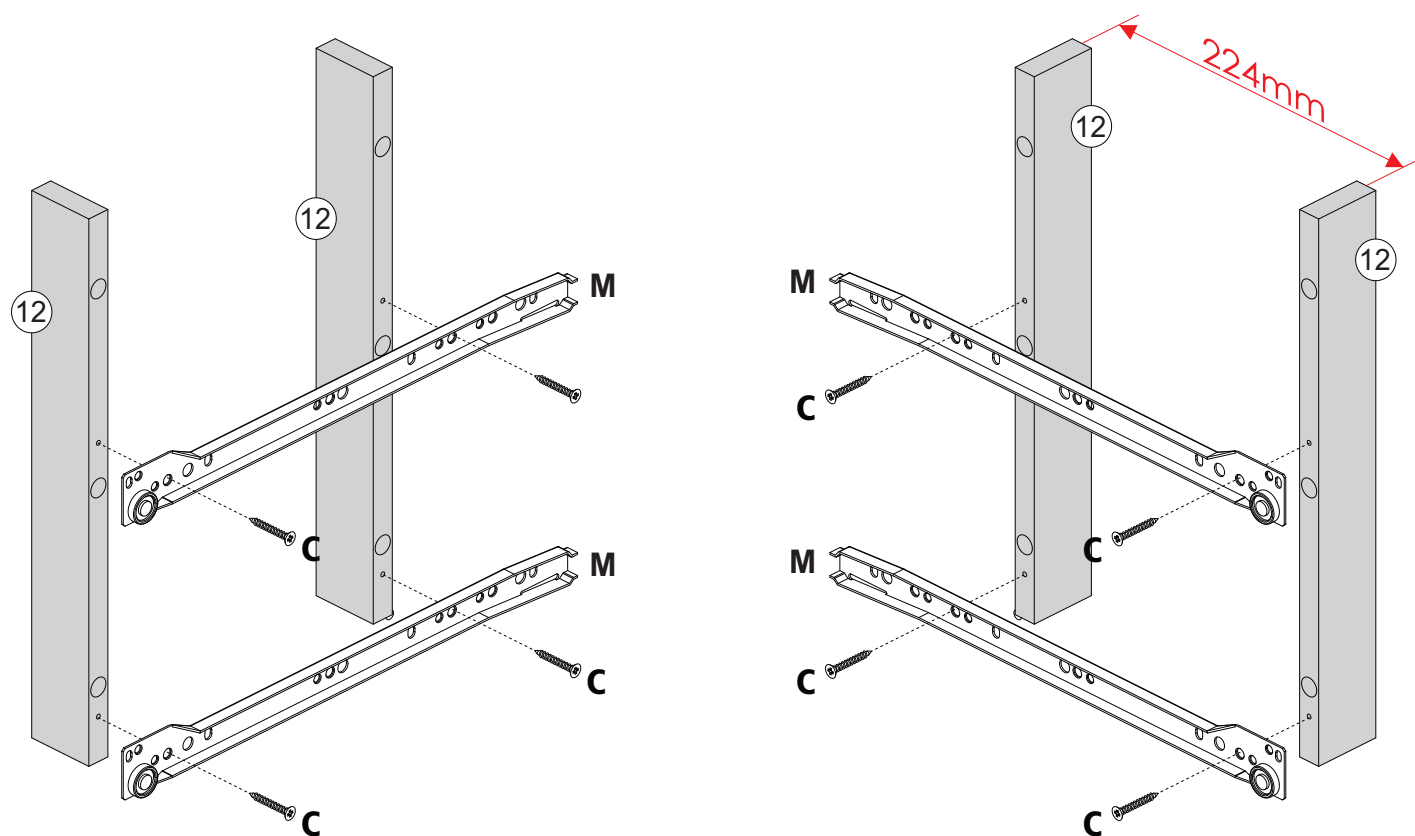

Passo 05

Alinhar com a travessa superior e fixar.

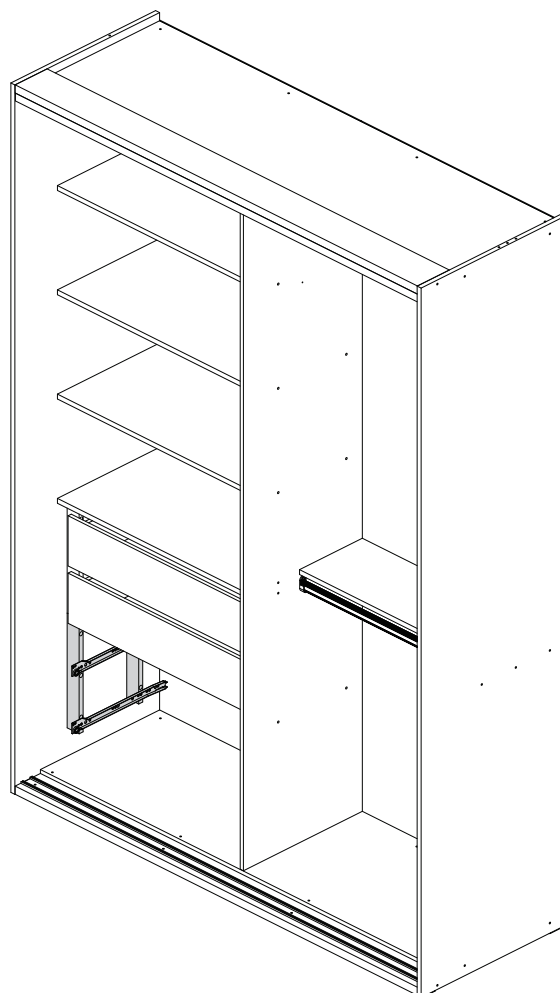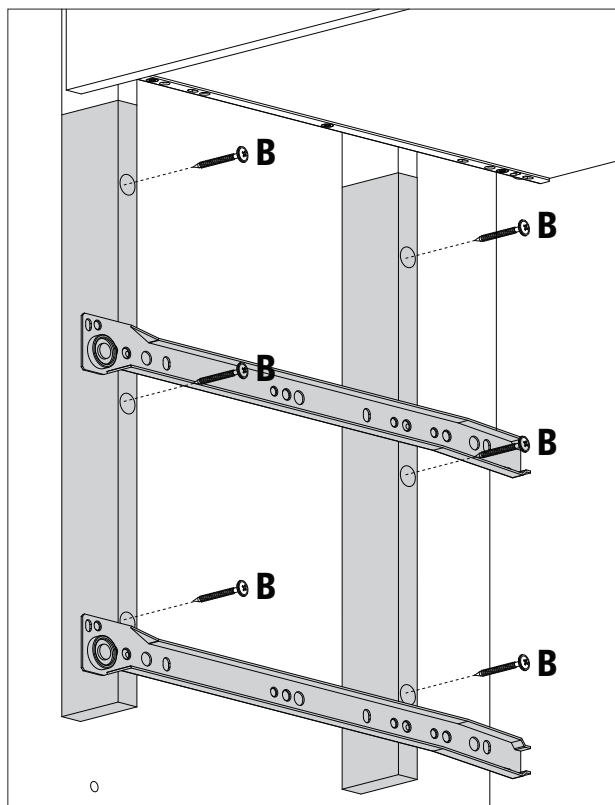

Passo 06

